




















TV KANALER

PAKKE 1

	KANAL NAVN	KANAL	MHZ
	Sverige 1	05	175,25 + Digital
	TV 2 Norge	06	182,25 + Digital
	TV2	07	189,25 + Digital
	Sverige 2	08	196,25 + Digital
	ARD	09	203,25 + Digital
	Infokanal	10	210,25
	DR 1	11	217,25 + Digital
	Prøvekanal	S08	154,25
	DR 2	S09	161,25 + Digital
	TV 4	S11	231,25 + Digital
	DR Ramasjang	S13	245,25 + Digital
	DR K	S14	252,25 + Digital
	DR-UPDATE	S15	259,25 + Digital
	ZDF	S16	266,25 + Digital
	VIVA	S17	273,25 + Digital
	RTL2	S18	280,25 + Digital
	TV2 Nord Plus	S19	287,25 + Digital
	DR HD		Digital
	DR K		Digital
	DR Ramasjang		Digital
	DR Synstolkning		Digital
	DR Update		Digital
	Folketings-tv		Digital
	NatGeo Wild HD		Digital

PAKKE 2

Pakke 2 indeholder også pakke 1's kanaler

	KANAL NAVN	KANAL	MHZ
	Euronews	45	663,25 + Digital
	Discovery Channel	46	671,25 + Digital
	TV2 Charly	47	679,25 + Digital
	TV 3	48	687,25 + Digital
	TV 3+	49	695,25 + Digital
	MTV Danmark	50	703,25 + Digital
	24 Nordjyske	51	711,25 + Digital
	Kanal 5 DK	52	719,25 + Digital
	TV 2 Sport	53	727,25 + Digital
	DK4	54	735,25 + Digital
	Animal Planet	55	743,25 + Digital
	TV 2 Zulu	56	751,25 + Digital
	Kanal 4	57	759,25 + Digital
	Disney Channel	58	767,25 + Digital
	EuroSport	59	775,25 + Digital
	6'eren	60	783,25 + Digital

For at modtage Digitale kanaler kræver det en Zaptor-boks, eller et Tv med DVB-C modtager.

Har tuneren problemer med at finde kanalerne, kan du manuelt indtaste følgende:

Frekvens: 346 MHz (346000 kHz)

Netværks-ID: 0

Modulation: 64 QAM

Symbol rate: 6900 KS